

SETTING TIME AND DAY

Press SET button (C) once.


The display indicator will move to position above clock symbol and will be flashing.

Press +/- buttons (E&F) to adjust time. Time will change quicker if pressed continually.

Press DAY button (G) to move indicator to current day of week.

Press SET button (C) three times if you wish to return to normal run state. Indicator on display will be above RUN symbol.

If you wish to change programme on/off times (see next section).

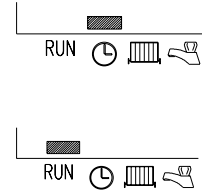

Note

The unit has a built in timer which will cause the programmer to return to normal run state automatically if a period of 5 minutes passes without any buttons being pressed.

CHANGING PROGRAMME TIMES

There are two programmes which can be changed, one for Central Heating and the other for Hot Water.


To change Central Heating press SET button (C) repeatedly until flashing indicator on display is above radiator symbol.

An indicator will be above ON and number 1 will appear above it on display. This indicates the time now shown on display is the 1st ON time. You can change this by pressing +/- buttons (E&F).

Press NEXT button (D). Indicator will be above OFF. Time now shown is 1st OFF time. Can be changed as before.

Pressing NEXT button (D) again will go to 2nd ON then again for 2nd OFF indicated with number 2 on display. Times can be changed as before.

To return to normal run state press SET button (C) until indicator on display is above RUN symbol.

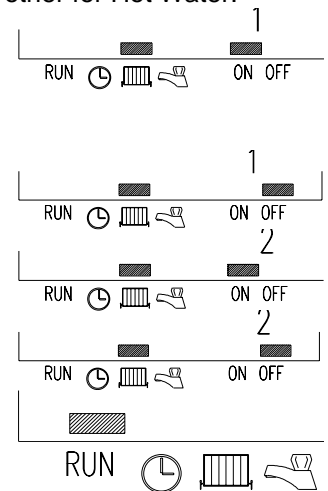

If unit is installed as a 7day programmer the initial programme displayed will be for Monday. You can go to any day of week by pressing DAY button (G) repeatedly. The ON/OFF times can be changed for each day as above.

If you press the COPY button (H) the current programme will be copied into the next day.

If unit is installed as a 5day/2day programmer the initial program displayed will be for Monday to Friday.

Pressing DAY button (G) will take you to programme for Saturday and Sunday. The ON/OFF times can be changed for each day group as above.


If you press the COPY button (H) the current programme will be copied into the next day group.

Note

It is not possible to copy Sunday to Monday.

For convenience to allow for programmes to go past midnight the programme day is from 3.00am to 3.00 am the next day.

To change Hot Water press SET button (C) repeatedly until flashing indicator on display is above tap symbol and proceed exactly as Central Heating above.

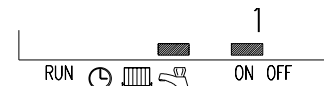

USING ADVANCE

This function is only applicable when programme is in 2 (on twice) or 1 (on once) operating modes.

To Advance Central Heating press ADV top half of button (J).

This will turn Central Heating on if it was in an off period and vice versa. It will stay in this state until either ADV is pressed again or until a programmed ON/OFF commences.

An indicator will appear on display top left corner pointing at ADV but is normally covered by flip down front fascia panel.



To Advance Hot Water press ADV top half of button (K).

This will turn Hot Water on if it was in an off period and vice versa. It will stay in this state until either ADV is pressed again or until a programmed ON/OFF commences.

An indicator will appear on display top right corner pointing at ADV but is normally covered by flip down front fascia panel.



USING +1HR

For +1HR Central Heating press +1HR lower half of button (J).

If the Central Heating operating mode is OFF then it will switch on for 1 hour.

If the Central Heating operating Mode is 1 (on once) or 2 (on twice) during an off period then it will switch on for 1 hour. If during an on period then it will temporarily extend that programmed period by 1 hour.

An indicator will appear on display lower left corner pointing at +1HR but is normally covered by flip down front fascia panel.



If the Central Heating operation mode is CONT(continuous) +1HR has no function. Pressing +1HR again cancels this function

For +1HR Hot Water press +1HR lower half of button (K).

If the Hot Water operating mode is OFF then it will switch on for 1 hour.

If the Hot Water operating Mode is 1(on once) or 2(on twice) during an off period then it will switch on for 1 hour. If during an on period then it will temporarily extend that programmed period by 1 hour.

An indicator will appear on display lower right corner pointing at +1HR but is normally covered by flip down front fascia panel.



If the Hot Water operation mode is CONT(continuous) +1HR has no function. Pressing +1HR again cancels this function.

POWER INTERRUPTION

In event of mains supply failure the back up battery ensures programmer continues to keep time and retain your stored programme. The screen will go blank but will return when power is restored. If left continuously without power for more than 30 days, it will stop keeping time. When power is returned it will then be necessary to set time and day.

SYSTEM DESIGN

The majority of Central Heating systems are fully pumped giving totally independent control over Central Heating and Hot Water. However, some installations incorporate pumped Central Heating and gravity Hot Water circulation. With these installations the Hot Water must be on whenever the Central Heating is operating. In such cases, this essential requirement will override the Hot Water programme settings entered.

Sunvic Controls Ltd., Bellshill Road, Uddingston, Glasgow G71 6NP. Tel : (01698) 812944

Select 207_7/98 P.3 (User Instr)